



# MSES

INSTRUCTION MANUAL  
& WARRANTY CARD

Table Fan  
Wall Fan  
Pedestal Fan

Obtain  
**fresh**  
air

 


[www.maasolar.com](http://www.maasolar.com)

## Salient Features of UNIFAN BLDC Table/Pedestal/Wall Fan:


- ⌚ BLDC, the most energy efficient motor constructed with Brushless DC Technology.
- ⌚ बी एल डी सी, ब्रशलेस डी सी तकनीक के साथ निर्मित सबसे अधिक ऊर्जा कुशल मोटर।
- ⌚ Consumes less than 60% power of normal conventional fan.
- ⌚ सामान्य पारंपरिक पंखे की तुलना में 60% से कम बिजली की खपत करता है।
- ⌚ There is no speed drop due to voltage fluctuation until 110 Volt input supply.
- ⌚ 110 वोल्ट की इनपुट आपूर्ति तक वोल्टेज में उतार-चढ़ाव के कारण गति में कोई कमी नहीं होती है।
- ⌚ Can with stand voltage fluctuation from 110 Volts to 280 Volts with low/high volt protection.
- ⌚ कम/उच्च वोल्ट सुरक्षा के कारण, 110 वोल्ट से 280 वोल्ट तक वोल्टेज उतार-चढ़ाव पर भी पंखा सामान्य रूप से चलेगा।
- ⌚ Over Wattage protection, if the fan take more wattage (>38 Watt) the RPM will be reduce automatically.
- ⌚ ओवर वॉटेज प्रोटेक्शन, अगर पंखा ज्यादा वॉटेज (>38 वॉट) लेता है तो RPM अपने आप कम हो जाएगा।
- ⌚ Easy speed control using the smart Remote.
- ⌚ स्मार्ट रिमोट का उपयोग करके आसान गति नियंत्रण।
- ⌚ Features with Remote, programmed with multiple (7 steps Remote with sleep timer option).
- ⌚ रिमोट के साथ फीचर, मल्टीपल के साथ प्रोग्राम किया गया (स्लीप टाइमर विकल्प के साथ 7 स्टेप रिमोट)।
- ⌚ Every Fan attended in extreme conditions before shipping.
- ⌚ शिपिंग से पहले प्रत्येक पंखे को हर परिस्थितियों में जांच किया गया है।
- ⌚ Repay you the investment within 2 years - making the UNIFAN BLDC fan practically free.
- ⌚ आपको 2 साल के भीतर UNIFAN BLDC पंखा व्यावहारिक रूप से मुफ्त।

### How to use your Remote:

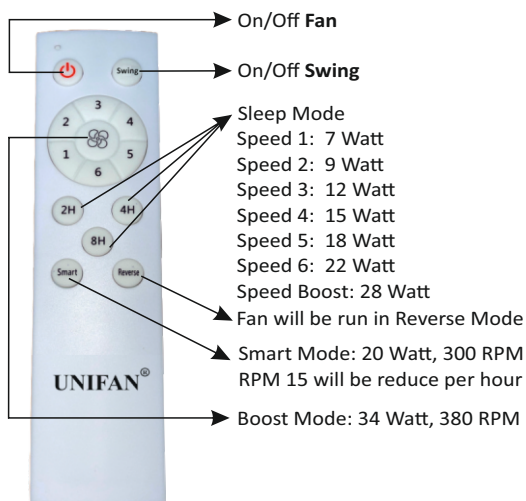

**UNIFAN**

 **INSTALLATION MANUAL  
CUM WARRANTY CARD**

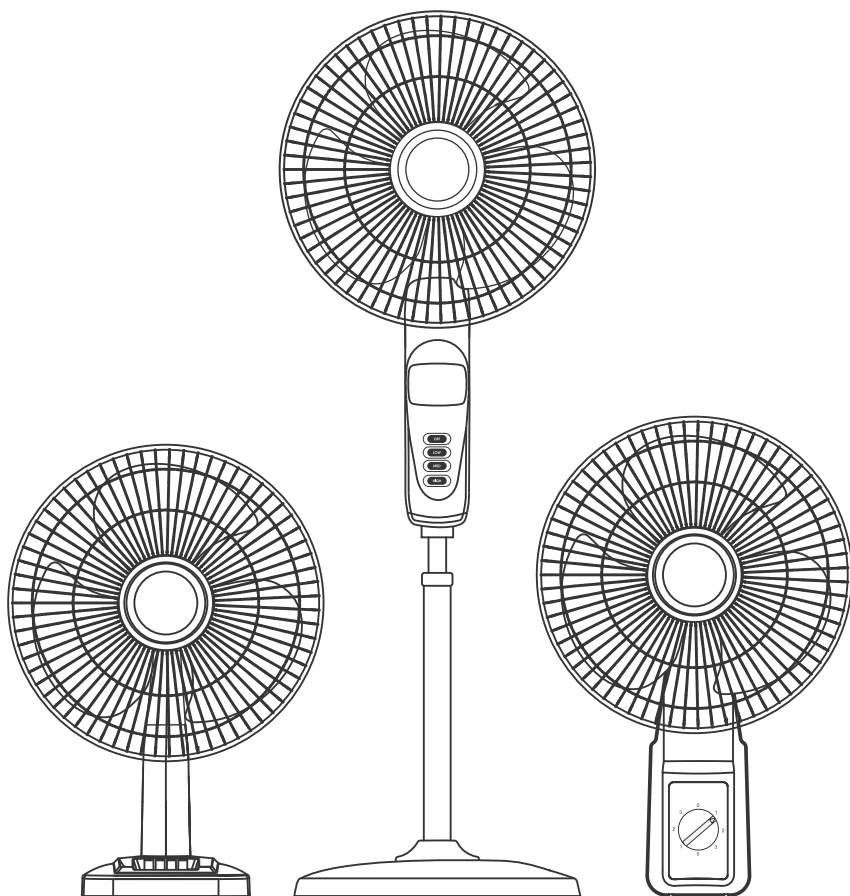


**300mm/400mm  
High Speed**

**2** YEAR  
PRODUCT  
WARRANTY\*

Please read the instruction manual carefully before use and safekeeping.

# ASSEMBLY DIAGRAM
 
## UNIFAN Pedestal Fan

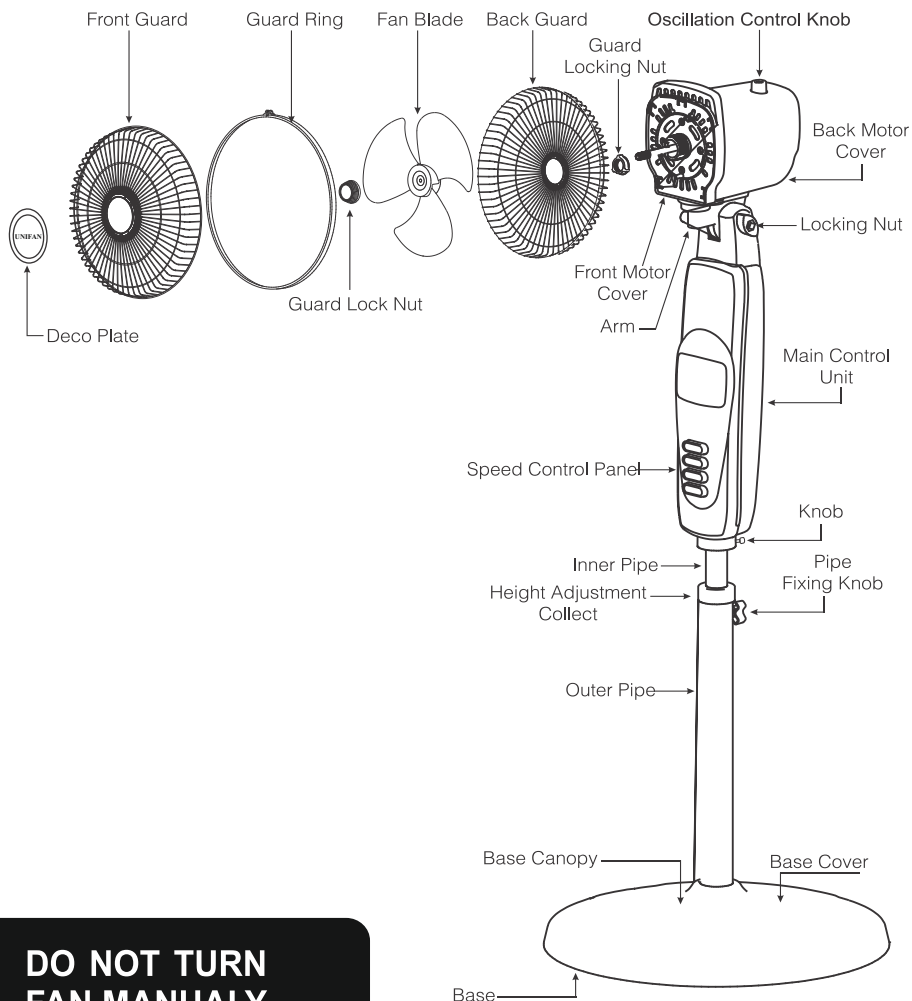


### DO NOT TURN FAN MANUALLY

1. SWITCH ON THE FAN, TURN ON THE OSCILLATION
2. WAIT FOR THE FAN TO TURN TO DESIRED ANGLE
3. SWITCH OFF THE OSCILLATION

# ASSEMBLY DIAGRAM


**UNIFAN**

 Table Fan

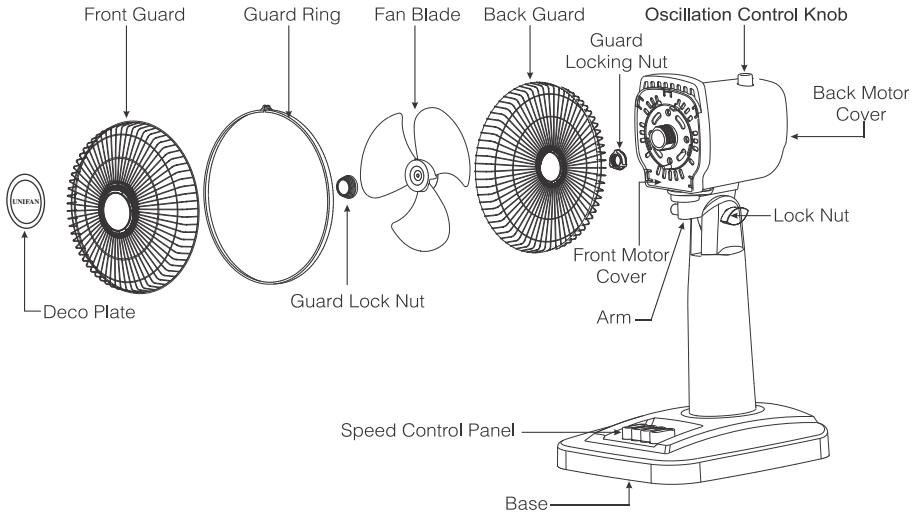

**UNIFAN**

 Wall Fan

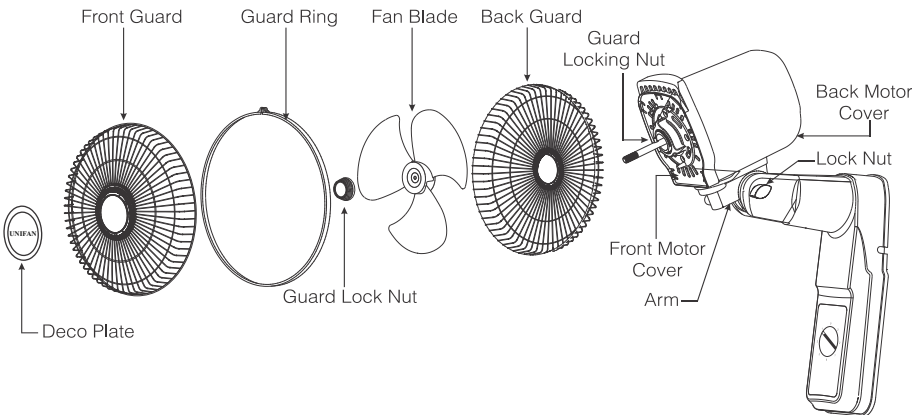

# ASSEMBLY INSTRUCTIONS

## ASSEMBLY INSTRUCTION FOR BLADES, GRILL WITH MAIN CONTROL UNIT

- Take out motor assembly along with the main control unit.
- Unscrew the Blade lock nut clockwise and the guard lock nut counter-clockwise. Then remove both of them.
- Take out Blade Guards assembly. Take Back Guard & mount it on Front motor cover. Ensure that the handle provided on back guard is up.
- Screw the Guard lock nut tightly to fix the back guard on Front motor cover.
- Install the blade on to the motor shaft by aligning and pushing blade slots until it reaches the retaining pin.
- Screw the Blade lock nut on motor shaft by rotating it in Anticlockwise direction.
- Slightly loosen the screw provided in guard ring & slide the Guard ring on the back guard.
- Take the front guard & place it in the second slot provided in the Guard ring. Ensure that “UNIFAN” logo on the guard label in upright position.
- Secure both guards firmly by tightening the screw provided in the guard ring.

## ASSEMBLY OF PEDESTAL FAN

- Take out Base & Pipe assembly from the box.
- Unscrew the bolt provided at bottom of Base pipe. Insert pipe assembly into the base slot & fix it to base using the bolt & washer. Tighten Fully.
- Take out the inner pipe from the pipe assembly. Tighten the Pipe using fixing knob after adjusting the inner pipe at suitable height.
- Mount main control unit along with motor, blade and grill assembly on top of the inner pipe. Tighten the main control unit over inner pipe using knob. Tighten fully.

**Note:** Always use on a dry stable surface.

## ASSEMBLY OF TABLE FAN

- Place the already assembled fan on a flat surface

**Note:** Always use on a dry stable surface.

## ASSEMBLY OF WALL FAN

- Attach the mounting bracket firmly to the wall.
- Mount the wall fan to the bracket by the clamp from behind the fan base plate.

**Note:**

1. Do not mount on ceiling.
2. Do not mount on an incline.
3. Do not mount on an angle.
4. Make sure the power cord does not get pinched.

## OPERATING INSTRUCTIONS OF PEDESTAL & TABLE FAN

- Plug the power supply cord into the wall outlet for 230V, 50Hz AC Supply. Speed is controlled by the Piano switch knobs.
- The air flow can be adjusted upward or downward by pushing the guard lightly to the desired angle by using locking nut.

## OPERATING INSTRUCTIONS OF WALL FAN

- Plug the power supply cord into the wall outlet for 230V, 50Hz AC Supply.
- Adjust the desired speed by pulling the speed string.
- The air flow can be adjusted upward or downward by pushing the guard lightly to the desired angle by using locking nut.

## SAFETY INSTRUCTIONS

- Use fan only as directed in these instructions. Failure to do so may cause fire electrical shock or injury.
- To protect against electric shock, do not immerse unit, put plug or cord in water or spray with liquids. Never allow water to drip into the motor housing.
- This fan is intended for household use only and not for commercial or industrial use.
- Disconnect fan from outlet when not in use, when moving fan or before cleaning, maintenance.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate without fan grills properly in place.
- Complete the assembly of the fan before switching on the fan.
- Disconnect the fan before moving from one location to another.
- Never insert fingers, pencils, or any other object through the guard when the fan is running.
- Do not use the fan near open window. Rain water may cause electrical hazards.
- Do not bump the guard or blades against anything, the deformation of the angles of the blades is liable to cause multifunction.
- When removing or carrying the fan, be sure to take hold of the handle or stand.
- Do not tilt or index the fan when in operation.
- Children should be supervised to ensure that they do not play with the appliances.

## CLEANING

- Be sure to unplug the electrical supply before cleaning. Disconnect the fan before removing guards for cleaning.
- To disassemble each part, reverse the order of assembly.
- Plastic parts should be cleaned with damp cloth or sponge. Be sure water or other liquid do not enter inside the motor.



**Please complete the following details:**

**WARRANTY CARD**

**कृपया निम्नलिखित विवरण भरें:**

Invoice/Cash Memo No.: ..... Date: ..... Model No.: ..... Product: .....

बीजक/कैश मेमो संख्या: ..... दिनांक: ..... मॉडल संख्या: ..... उत्पाद: .....

Dealer's Name & Address: .....

डीलर का नाम और पता: .....

Owner's Name & Address: .....

मालिक का नाम और पता: .....

Authorised Dealer Stamp

अधिकृत डीलर स्टाम्प

**Warranty Terms & Conditions:**

**वारंटी के नियम और शर्तें:**

**UNIFAN offers the original purchaser/owner of the product a benefit of 24 months service warranty against defect arising out of defective material and/or workmanship as per term & condition mentioned below:**

**UNIFAN उत्पाद के मूल खरीदार/मालिक को नीचे उल्लिखित नियम और शर्तों के अनुसार दोषपूर्ण सामग्री और/या कारीगरी से उत्पन्न दोष के खिलाफ 24 महीने की सेवा वारंटी का लाभ प्रदान करता है**

- The Warranty will be void if the sticker, model no, date of packaging of the product are found altered with or defected.  
यदि उत्पाद के स्टिकर, मॉडल नंबर, पैकेजिंग की तारीख में कोई बदलाव या दोष पाया जाता है तो वारंटी शून्य हो जाएगी।
  - Warranty is limited to the original purchaser only. The Company isn't liable for any claim other than from the original purchaser.  
वारंटी केवल मूल खरीदार तक ही सीमित है। कंपनी मूल खरीदार के अलावा किसी अन्य दावे के लिए उत्तरदायी नहीं है।
  - Parts/components that are excluded from the warranty:  
metal/plastic cabinets, wires, power cords, connector/socket, carton box and packing materials.  
पुर्ज/घटक जिन्हें वारंटी से बाहर रखा गया है: धातु/प्लास्टिक कैबिनेट, तार, पावर कॉर्ड, कनेक्टर/सॉकेट, कार्टन बॉक्स और पैकिंग सामग्री।
  - Warranty isn't applicable if the product is found overloaded, with loose connection, improperly installed or tempered.  
यदि उत्पाद ओवरलोडेड पाया जाता है, ढीले कनेक्शन के साथ, अनुचित तरीके से स्थापित या टेम्पर्ड होने पर वारंटी लागू नहीं होती है।
  - Warranty isn't applicable if any damage is caused due to natural calamity that includes flood, earthquake or any act of God.  
यदि प्राकृतिक आपदा के कारण कोई क्षति होती है जिसमें बाढ़, भूकंप या ईश्वर का कोई कार्य शामिल है तो वारंटी लागू नहीं होती है।
  - The Company would endeavor to carry out repairs/replacement at the earliest but not bound to do so within specified period.  
कंपनी जल्द से जल्द मरम्मत/प्रतिस्थापन करने का प्रयास करेगी लेकिन निर्दिष्ट अवधि के भीतर ऐसा करने के लिए बाध्य नहीं है।
  - The customer will have no claim against the company, its dealer or employees under pursuant to do this warranty in respect of death, injury, loss or damage caused due to high voltage input, improper operation or utilization other than that started in the instruction manual or due to any other cause or circumstance beyond the control of company.  
उच्च वोल्टेज इनपुट, अनुचित संचालन या उपयोग के कारण हुई मृत्यु, चोट, हानि या क्षति के संबंध में इस वारंटी को करने के लिए ग्राहक के पास कंपनी, उसके डीलर या कर्मचारियों के खिलाफ कोई दावा नहीं होगा। कंपनी के नियंत्रण से परे किसी अन्य कारण या परिस्थिति के कारण।
- Only the Court of Delhi shall have the jurisdiction for setting the claims and/or disputed arising under the warranty.**
- वारंटी के तहत उत्पन्न होने वाले दावों और/या विवादित मामलों को तय करने का अधिकार केवल दिल्ली के न्यायालय के पास होगा।**

**Manufactured By:**

**Maa Sharda Electronics System**

**C-146/147, Sector-3, DSIIDC Ind. Area, Bawana  
Delhi-110039**

**Website: [www.maasolar.com](http://www.maasolar.com)**

**Email ID: [maasolarone@gmail.com](mailto:maasolarone@gmail.com) [info@maasolar.com](mailto:info@maasolar.com)**

**Customer Support No.: 011-42575025, +91 92789 65687**